



Autorestart when UPS recover power

1. So go to BIOS F12

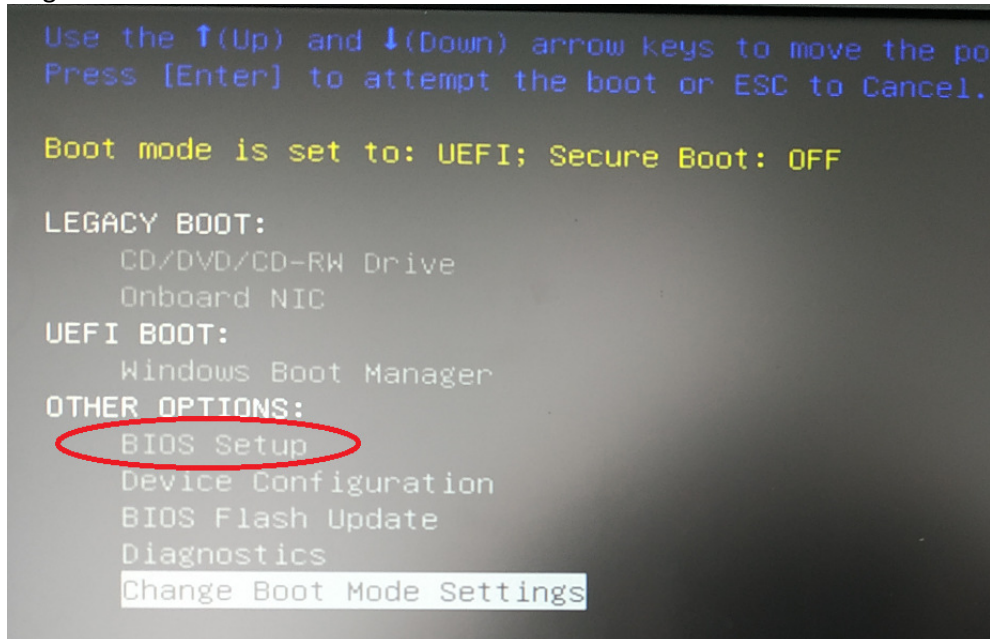

- 2.
3. In power management click on "AC recover"
4. Select "Power on"

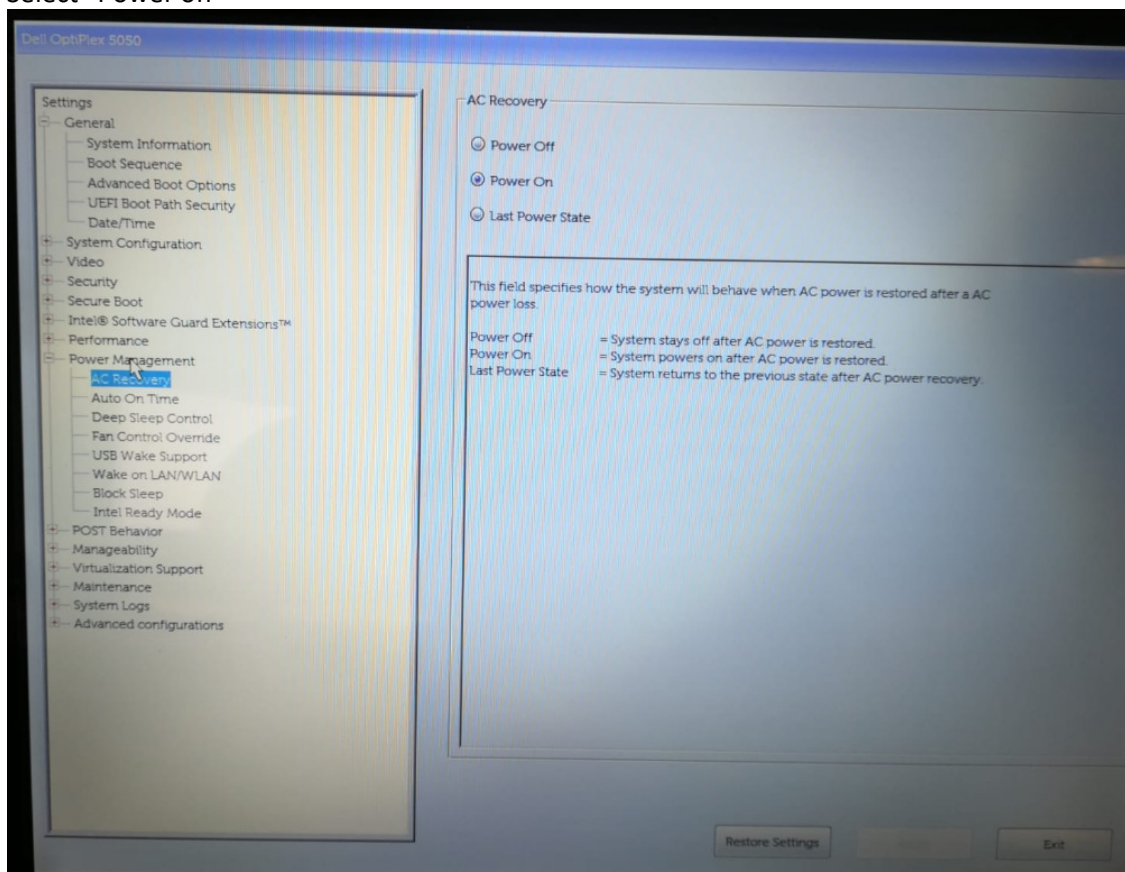

5. Then apply and Save.