

FUJINON H16x10A-DSD






Dismount
4 screws to
remove
cover



zoom pot

zoom motor

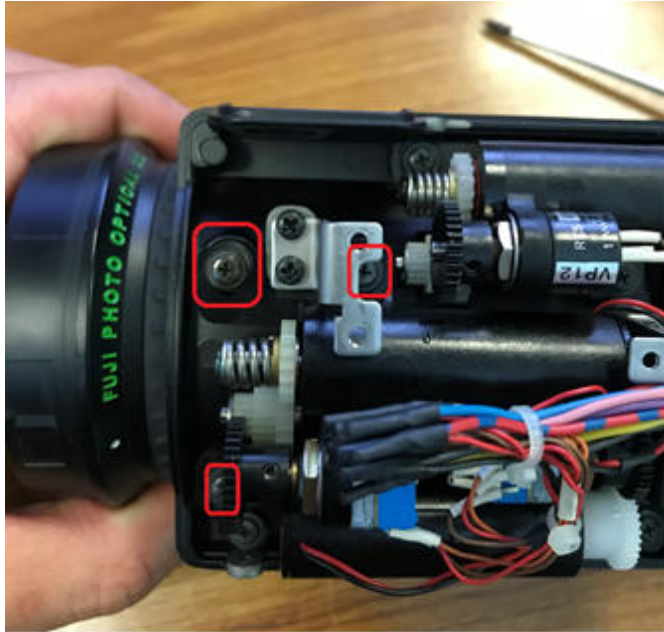


unscrew these
3 screws to
dismount the block


BEFORE TO REMOVE ALL BE CAREFULL ABOUT THE MIN AND MAX POSITION OF THE POTENTIOMETER AND THE ZOOM RING AS WELL.

MARK POSITION OF THE ZOOM RING AND THE POTENTIOMETER TO KNOW.

THE POTENTIOMETER IS ABLE TO MAKE ONLY ONE ROTATION, IF YOU NEED TO REPLACE THE POTENTIOMETER PLACE THE RING IN THE MIDDLE POSITION AND TO DO SAME WITH THE POTENTIOMETER.

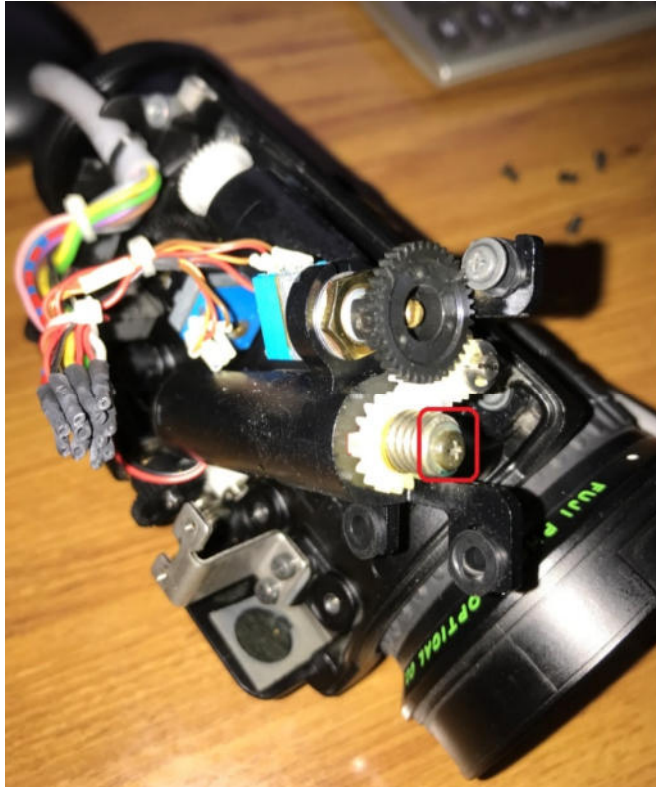

bloc with your
fingers the white
platic gear of zoom
and then unscrew
this screw

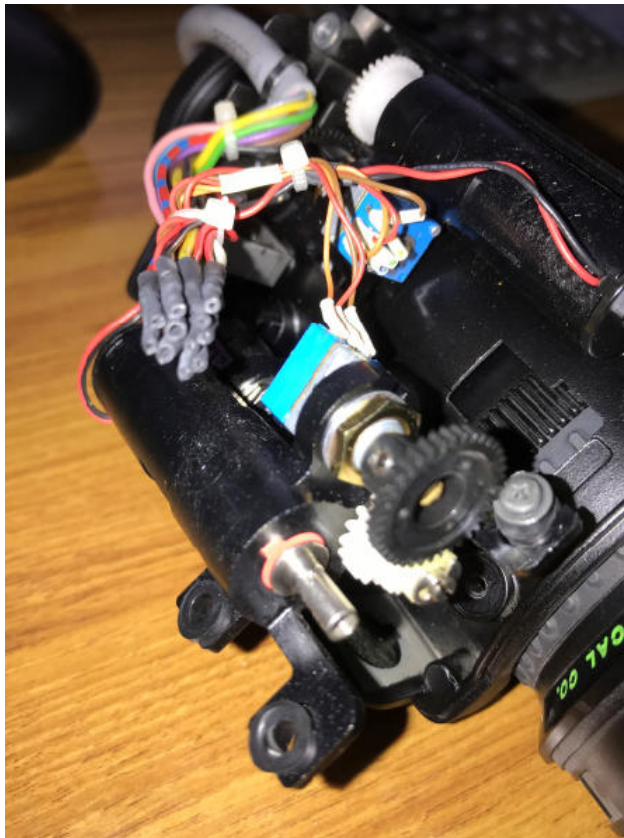




with the small flat
screw driver
remove the black
cover from the
back of zoom
motor



push by the axis
motor.
motor will move out
a black rubber
cover will out

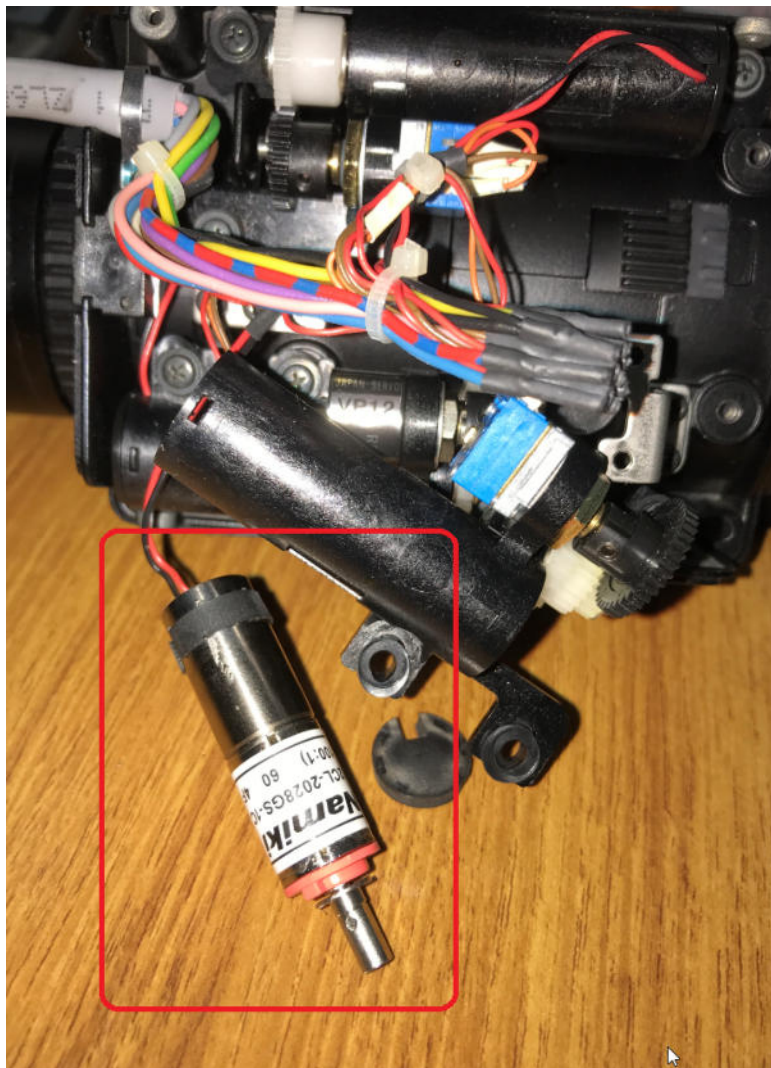

motor is out