

On Customer Site

Visit Report

Reference :

Commande BSTe France : CM2103037		Call / PM number : PM 244	
Customer :	Schur Flexibles Uni Roto	System :	PS 5000
Customer Contact :	M. Thomas Tronchet	ASO / WA :	ASO075570
Customer Order number :		Machine Nickname :	BOBCAT

Visit Purpose :

Mechanical Preparation	☐	Installation	☐	Start-up	☐
Maintenance	☒	Under Contract	☒	Out of Contract	☐
Troubleshoot	☐	Under Warranty	☐	Out of Warranty	☐
Instruction	☐ Yes				
	☒ No				

	18 / 10 / 2021	/ /	/ /	/ /	/ /	/ /
Travel To	0.5					
Start Time	8h30					
Lunch Time	0					
End Time	9h30					
Travel From	0					

Details	Verification du system et relever de data.
---------	--

Purpose of the visit completed : Yes ☒ No ☐

Need a new visit : Yes ☐ No ☒

On Customer Site

Maintenance Checklist for PS Systems

Available supporting documents :

- iPQ-Center Setup Instruction
- iPQ-Center Maintenance routines
- WSC-Camera Maintenance routine
- LED illumination maintenance routine

Customer name and place : [Schur Flexibles Uni Roto – 24 Hameau de la Neuville – 62127 Averdoingt - France](#)

Contact person at customer / Title : [M. Thomas Tronchet \(Maintenance Manager\)](#)

Customer Mail & Mobile/Landline : thomas.tronchet@schurflexibles.com / +33 7 64 41 95 75

System Type : [PS 5000](#)

WA/ASO : [ASO075570](#)

Machine Manufacturer/Model/Nickname : [/ BOBCAT](#)

Date : [18/10/2021](#)


Name : [Richard Relin](#)

Comments :

Signatures :



Richard Relin 2021-10-22T09:53:32+02:00

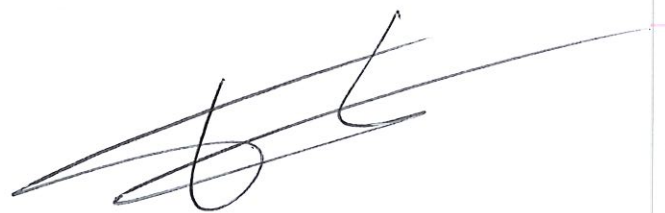

BST eltromat FSE

Customer

On Customer Site

Prior to a Preventive Maintenance :

Check for system affecting modification reports and software releases.

Check for iPQ-Spectral sensor replace date.

Check with customer about problems and demands.

1. Premius digital Controller :

OK/NOK/NA

- Check fan function.

☒ ☐ ☐

- Replace or clean fan filter.

☒ ☐ ☐

2. Visual check of system basic hardware condition :

OK/NOK/NA

- Check if all screws are in position and tightened.

☒ ☐ ☐

- Check cables for damages and correct fit in cable trunks.

☒ ☐ ☐

- Check if all connectors are tightened.

☒ ☐ ☐

3. Check image quality of screens with test pattern :

OK/NOK/NA

- Load test pattern from screen supplier on computer and display on all screens.

☐ ☐ ☒

- Check for color quality, pixel defects, contrast, brightness.

☐ ☒ ☐

- White calibration (if the colors are not uniform)

☐ ☐ ☒

- Gray calibration (color control option)

☐ ☐ ☒

- Lens calibration (Register option)

☐ ☐ ☒

- Recalibrate touch screen if necessary.

☐ ☒ ☐

4. Traverse and Optic Head according to separate instruction :

OK/NOK/NA

- Replace flash bulbs / flash blocks.

☐ ☒ ☐

Last replacement date :

Screwed ☐

Welded ☒

- Clean glasses on flash units (Top/Bottom).

☒ ☐ ☐

- Lens glass cleaning.

☒ ☐ ☐

- Visual check and of traverse bars.

☒ ☐ ☐

On Customer Site

5. Check power flash or homogeneous BackPlate :

OK/NOK/NA

- Check function of flash bulbs.

☒ ☐ ☐

Result :

- ~~Clean~~/Check surface of BackPlate.

☐ ☐ ☒

Dimension :

6. Check for useful software update with release letter: (*)

OK/NOK/NA

- Update to latest released software version IF system is affected from bug fixes and/or new functions, features and developments.

☐ ☒ ☐

7. Check function and performance of the system / customer feedback :

OK/NOK/NA

- System performance at splice situations.
- System performance after "out of print" situations.
- System performance close to max press speed
- Check remote service function with BST eltromat RS. (**)
- Teamviewer Version check and upgrade (v12) :

☐ ☒ ☐

☐ ☒ ☐

☐ ☒ ☐

☐ ☐ ☒

☐ ☐ ☒

8. Give an instruction and production guiding for system operators.

OK/NOK/NA

- Explain special functions more detailed on operators (On request).
- Guide the production and watch how operators work with the system to give hints for a better operation if necessary.

☐ ☒ ☐

☐ ☒ ☐

9. Backup / Fine tuning : (*)**

OK/NOK/NA

- *Preconditions : above points are checked and okay*
- Backup HardDisk or Image-PC exist from current Base Image -PC.
- Save trace on USB stick and explain the procedure to the customer.
- Save database (Genius.mdb)

☒ ☐ ☐

☐ ☒ ☐

☒ ☐ ☐

☒ ☐ ☐



PS Systems Preventive Maintenance

On Customer Site

- FireViewer icon placed on desktop	☒ ☐ ☐
10. Make a backup for our own service purpose and put this on our server.	☒ ☐ ☐

OK/NOK/NA

On Customer Site

Technical datas

Screen Resolution 1 : 1280x1024

Screen Resolution 2 : 1280x1024

Computer Type : PD Controller PS5

(*) Global Version : Current : 1.4.5 New:

(**) Remote Maintenance (Teamviewer)

IP address :
Subnet mask :
Default gateway :
Preferred DNS server :
Alternate DNS server :

Teamviewer ID :

		OK/NOK/NA
(***)	- Trace on USB Stick	☒ ☐ ☐
	- Database (Genius.mdb)	☒ ☐ ☐
	- Screenshot from Application settings	☒ ☐ ☐
	- System picture	☐ ☒ ☐

On Customer Site

Parts replaced during Preventive Maintenance :

1 -

2 -

Parts suggested to replace during the next Maintenance :

1 -

3 -

2 -

4 -

Part need to be replaced as soon as possible :

1 -

4 -

2 -

5 -

On Customer Site

Notes
