

On Customer Site

Visit Report

Reference :

Commande BSTe France : CM2303048		Call / PM number : PM931	
Customer :	CEE Robert Schisler	System :	Premius
Customer Contact :	M. Nicolas Fournier	Typ / ASO / SN :	855046/08
Customer Order number :	CM2303048 (Signed)	Machine Nickname :	M146

Visit Purpose :

Mechanical Preparation	☐	Installation	☐	Start-up	☐
Maintenance	☒	Under Contract	☒	Out of Contract	☐
Troubleshoot	☐	Under Warranty	☐	Out of Warranty	☐
Instruction	☐ Yes				
	☒ No				

	19 / 06 / 2025	/ /	/ /	/ /	/ /	/ /
Travel To	0					
Start Time	12h30					
Lunch Time	0					
End Time	13h45					
Travel From	4					

Details	Maintenance préventive Premius. Calibrations Zoom et blancs.
---------	--

Purpose of the visit completed : Yes ☒ No ☐

Need a new visit : Yes ☐ No ☒

On Customer Site

Maintenance Checklist for Premius systems

Available supporting documents :

- Premius PM -1st step (fr)
- Premius digital - User Manual French
- Base de données « GENIUS mdb
- Système de base Fenêtre d'état du système (save Trace)

Customer name and place : [CEE Robert Schisler / 156 Avenue Emile Zola – 79100 – Thouars - France](#)

Contact person at customer : [M. Nicolas Fournier \(Responsable Service électrique\)](#)

Customer Mail & Mobile/Landline : nicolas.fournier@ceeschisler.fr / +33 7 72 24 33 25

Type : [Premius](#)

SN : [855046/08](#)

Machine Manufacturer/Model/Nickname : [W&H/Novoflex CM/M146](#)

Date : [19/046/2025](#)

Name : [Richard Relin](#)

Comments :

Signatures :



19/06/2025 14:15

BST eltromat FSE



19/06/2025 14:25

Customer

On Customer Site

Prior to a Preventive Maintenance :

Check for system affecting modification reports and software releases.

Check for iPQ-Spectral sensor replace date.

Check with customer about problems and demands.

1. Premius digital Controller :

OK/NOK/NA

- Check fan function.

☒ ☐ ☐

- Replace or clean fan filter.

☒ ☐ ☐

2. Visual check of system basic hardware condition :

OK/NOK/NA

- Check if all screws are in position and tightened.

☒ ☐ ☐

- Check cables for damages and correct fit in cable trunks.

☒ ☐ ☐

- Check if all connectors are tightened.

☒ ☐ ☐

3. Check image quality of screens with test pattern :

OK/NOK/NA

- Load test pattern from screen supplier on computer and display on all screens.

☒ ☐ ☐

- Check for color quality, pixel defects, contrast, brightness.

☒ ☐ ☐

- White calibration (if the colors are not uniform)

☒ ☐ ☐

- Gray calibration (color control option)

☒ ☐ ☐

- zoom calibration

☒ ☐ ☐

- Recalibrate touch screen if necessary.

☒ ☐ ☐

4. Traverse and Optic Head according to separate instruction :

OK/NOK/NA

- Replace flash bulbs / flash blocks.

☐ ☒ ☐

Last replacement date :Qty : 4/8 ok Haut - 2/8 OK Bas

Screwed ☐

Welded ☒

- Clean glasses on flash units (Top/Bottom).

☒ ☐ ☐

- Lens glass cleaning.

☒ ☐ ☐

- Visual check and cleaning of traverse bars.

☒ ☐ ☐

On Customer Site

5. Check power flash or homogeneous BackPlate :

OK/NOK/NA

- Check function of flash bulbs.

☐ ☐ ☒

Result :

- Clean/Check surface of BackPlate.

☐ ☐ ☒

Dimension :

6. Alarm status indicator :

OK/NOK/NA

- Check function of light bulbs in green, yellow and red.
- Check function of acoustic alarm.

☒ ☐ ☐
☒ ☐ ☐

7. Verify the web way in front of line cameras and under measurement wheel :

OK/NOK/NA

- There must be no waves on the web.
- The guide rollers must rotate with the web speed.
- The line camera must be mounted according to project drawing.
- Web guiding unit in machine must be in operation.

☒ ☐ ☐
☒ ☐ ☐
☒ ☐ ☐
☒ ☐ ☐

8. Check for useful software update with release letter : (*)

OK/NOK/NA

- Update to latest released software version IF system is affected from bug fixes and/or new functions, features and developments.

☐ ☐ ☒

9. Check function and performance of the system / customer feedback :

OK/NOK/NA

- System performance at splice situations.
- System performance after "out of print" situations.
- System performance close to max press speed
- Check remote service function with BST eltromat RS. (**)
- Teamviewer Version check and upgrade (v11) :

☐ ☐ ☒
☒ ☐ ☐
☒ ☐ ☐
☐ ☒ ☐
☒ ☐ ☐

Current version : [v6](#) New : [v11](#)

On Customer Site

10. Give an instruction and production guiding for system operators.

OK/NOK/NA

- Explain special functions more detailed on operators (On request).
- Guide the production and watch how operators work with the system to give hints for a better operation if necessary.

☐☐☒☐☒☐**11. Backup / Fine tuning : (***)**

OK/NOK/NA

- *Preconditions : above points are checked and okay*
- Backup HardDisk or Image-PC exist from current Base Image -PC.
- Save trace on USB stick and explain the procedure to the customer.
- Save database (Genius.mdb)
- FireViewer icon placed on desktop

☒☐☐☐☐☒☐☐☒☐☐☒☒☐☐

OK/NOK/NA

12. Make a backup for our own service purpose and put this on our server.☐☒☐

On Customer Site

Technical datas

Computer name : **PREMIUS**

Computer description :

Total Physical Memory : **3 GB**Free Space in C Drive (System) : **463 GB**Free Space in D Drive : **1.81 TB**Screen Resolution 1 : **1280x1024**Screen Resolution 2 : **1280x1024**Computer Type : **PD Controller i3 – 2120 3.4 GHz A1 / SN : 167093BE_0331**Flash Bulb Reference : **Flash 330 DC 24V 40VA**

(*) Global Version : Current : **1.32.25** New :

(**) **Remote Maintenance (Teamviewer)**

IP address : **Automatic IP**

Subnet mask :

Default gateway :

Preferred DNS server :

Alternate DNS server :

Teamviewer ID : 1 733 758 414 / v11

- (***)
- Trace on USB Stick
 - Database (Genius.mdb)
 - Screenshot from Application settings
 - System picture
 - FireViewer adapters : **3**

OK/NOK/NA

☒ ☐ ☐☒ ☐ ☐☒ ☐ ☐☒ ☐ ☐☒ ☐ ☐

On Customer Site

Parts replaced during Preventive Maintenance :

1 –	3 -
2 –	4 -

Parts suggested to replace during the next Maintenance :

1 – Flash 330 DC 24V 40VA	3 -
2 –	4 -

Part need to be replaced as soon as possible :

1 –
2 -

Note

On Customer Site

- Sur les 16 flashes(8 en haut 8 en bas) sur ce du bas plus que 2 fonctionne en haut 2 sur les 8 faiblisse.