

On Customer Site

Visit Report

Reference :

Commande BSTe France : CM1801013		Commande BSTe : PM560	
Customer :	DS Smith Bretagne	System :	iPQ Center
Customer Contact :	M. David Dagois	SN / WA :	ASO090731_WA0022231
Customer Order number :	CM1801013 – Signé	Machine Nickname :	Kobden & Chadwick

Visit Purpose :

Mechanical Preparation	☐	Installation	☐	Start-up	☐
Maintenance	☒	Under Contract	☒	Out of Contract	☐
Troubleshoot	☐	Under Warranty	☐	Out of Warranty	☐
Instruction	☐ Yes				
	☒ No				

	15/11/2023					
Travel To	1					
Start Time	9h00					
Lunch Time	0.75					
End Time	14h30					
Travel From	1.5					

Details	Préventive Maintenance sur système iPQ Center suivant check list.
---------	---

Purpose of the visit completed : Yes ☒ No ☐

Need a new visit : Yes ☐ No ☒

On Customer Site

Maintenance Checklist for iPQ systems

Available supporting documents :

- iPQ-Center Setup Instruction
- iPQ-Center Maintenance routines
- WSC-Camera Maintenance routine
- LED illumination maintenance routine

Customer name and place : [DS Smith, ZI Kervoasdou – 29270 Carhaix Plouguer - France](#)

Contact person at customer : [M. David Dagois \(Responsable Preprint\)](#)

Customer Mail & Mobile/Landline : david.dagois@dssmith.com / +33 2 98 93 13 68

System Type : [iPQ Center](#)

WA/ASO : [WA0022231](#) / [ASO090731](#)

Machine Manufacturer/Model/Nickname : [Cobden Chadwick / PI087 / Cobden](#)

Date : [15/11/2023](#)

Name : [Arnaud Darcel](#)

Comments :

Signatures :



Arnaud Darcel 2023-11-15T14:04:59+01:00



David Dagois 2023-11-15T14:04:45+01:00

BST eltromat FSE

Customer

On Customer Site

Prior to a Preventive Maintenance :

Check for system affecting modification reports and software releases.

Check for iPQ-Spectral sensor replace date.

Check with customer about problems and demands.

OK/NOK/NA

1. Replace filters of cabinets, check fan function.

☒ ☐ ☐

2. Visual check of system basic hardware condition :

OK/NOK/NA

- Check if all screws are in position and tightened.
- Check cables for damages and correct fit in cable trunks.
- Check if all connectors are tightened.

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

3. Check image quality of screens with test pattern :

OK/NOK/NA

- Load test pattern from screen supplier on computer and display on all screens.
- Check for color quality, pixel defects, contrast, brightness.
- Recalibrate touch screen if necessary.

☒ ☐ ☐

☒ ☐ ☐

☐ ☒ ☐

4. Traverse and WSC-Camera according to separate instruction :

OK/NOK/NA

- Replace flash bulbs for main flash.
- Clean glasses in front of main flash.
- Change filters, check fan function.
- Clean lens from dust.
- Clean shadow reducing backplate.
- Check flash bulb in lacquer (Cold Seal) flash.
- Clean half mirrored glass in lacquer flash.
- Check ZIF function with buttons on WSC Control Board.
- Visual check and cleaning of traverse bars.

☐ ☒ ☐

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

☐ ☐ ☒

☐ ☐ ☒

☒ ☐ ☐

☒ ☐ ☐

On Customer Site

5. Check power flash or homogeneous BackPlate :

OK/NOK/NA

- Check function of flash bulbs according to instruction.
- Clean surface of white plate.
- Visual check and cleaning of traverse bars.

☐ ☐ ☒

☐ ☐ ☒

☐ ☐ ☒

6. Alarm status indicator :

OK/NOK/NA

- Check function of light bulbs in green, yellow and red.
- Check function of acoustic alarm.

☒ ☐ ☐

☒ ☐ ☐

7. Verify the web way in front of line cameras and under measurement wheel :

OK/NOK/NA

- There must be no waves on the web.
- The rollers must be smooth, not (max. slightly) spiraled. (iPQ-Check, sis,icm,bc).
- The guide rollers must rotate with the web speed.
- The measuring wheel must be mounted on a roller wrapped $\geq 90^\circ$ material.
- The line camera must be mounted according to project drawing.
- Web guiding unit in machine must be in operation.

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

8. Line ship cameras and illumination LED function and image quality :

OK/NOK/NA

- Clean internal mirrors and camera lenses with mirror cleaner.
- Clean LED front illumination and possible LED backlight with window cleaner.
- Verify mechanical mounting of components, special the position of LED backlight to front illumination unit.
- Check LEDs function by sunglasses or welding glasses.
- Change filters and check fans on function.
- Check / proceed the mechanical alignment.
- Check / proceed a white alignment.
- Check / proceed a shading.

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

☐ ☒ ☐

☒ ☐ ☐

☒ ☐ ☐

On Customer Site

9. Check measurement wheel :

OK/NOK/NA

- Mounted according to latest mechanical drawing. ☒☐☐
- Pressure according to iPQ-Check maintenance manual. (10-15N) ☒☐☐
- No dirt or damages on rubber surface. ☒☐☐
- Smooth running. ☒☐☐
- Running on the web. ☒☐☐
- Not too far from line camera unit (≤ 1 meter). ☒☐☐
- Rollers not or only slightly spiraled. ☒☐☐

OK/NOK/NA

10. Exchange the UPS battery according to iPQ-Check maintenance.

☒☐☐

- Model : **Ellipse ECO 1200** Date **2023**

11. Check for useful software update with release letter : (*)

OK/NOK/NA

- Update to latest released software version IF system is affected from bug fixes and/or new functions and features. ☐☒☐
- Check if an update of communication Workflow components is also necessary. ☒☐☐

12. Check Spectral color measurement :

OK/NOK/NA

- Check sensor front, sensor flashes and reference tiles for dust and contamination. ☐☐☒
- Proceed an alignment of sensor to backing by SUAT-tool. ☐☐☒
- Proceed an alignment of a possible backing wheel by SUAT-tool. ☐☐☒
- Check and clean backing from contamination. ☐☐☒
- Check if sensor can reach its manual calibration and parking position. ☐☐☒
- Check backing wheel functions : spin, air pressure, (parallel) position to web. ☐☐☒

13. Check function and performance of the system :

OK/NOK/NA

- Performance of 100% print defect detection. ☒☐☐
- System performance at splice situations. ☐☐☒
- System performance after "out of print" situations. ☐☐☒

On Customer Site

- | | |
|---|---|
| - System performance close to max. iPQ check system speed. | ☒ ☐ ☐ |
| - Check function/performance of additional software options like barcode, color Monitoring, Smartregister, etc. | ☒ ☐ ☐ |
| - Check remote service function with BST eltromat RS. (**) | ☒ ☐ ☐ |
| - Teamviewer Version check and upgrade (v15) : | ☒ ☐ ☐ |
| - Check availability of system in customer network for snapshot gallery, pdf-upload And WorkFlow applications. | ☒ ☐ ☐ |

14. Give an instruction and production guiding for system operators.

OK/NOK/NA

- | | |
|---|---|
| - Explain new functions from software upgrade | ☐ ☒ ☐ |
| - Proceed a practice training at machine about all basic functions. | ☒ ☐ ☐ |
| - Explain special functions more detailed on operators request. | ☒ ☐ ☐ |
| - Guide the production and watch how operators work with the system to give hints for a better operation. | ☒ ☐ ☐ |

15. Backup for customer :

OK/NOK/NA

- | | |
|--|---|
| - <i>Preconditions : above points are checked and okay</i> | ☒ ☐ ☐ |
| - Backup HardDisk or Image-PC exist from current Base Image -PC. | ☒ ☐ ☐ |
| - If NOK on previous point, make a new Image-PC or Backup HDD. | ☐ ☒ ☐ |
| - Write date and WA/ASO number on Backup HardDisk or Image-PC file name and give a copy to the customer. | ☐ ☒ ☐ |

OK/NOK/NA

16. Make a backup for our own service purpose and put this on our server. (*)**
☒☐☐

On Customer Site

Technical datas

Computer name : [22231iPQ-Center1-1](#)

Computer description : [iPQ-Center, WA22231](#)

Total Physical Memory : [96 GB](#)

Free Space in C Drive (System) : [30.2 GB](#)

Free Space in D Drive (Data) : [81.4 GB](#)

Free Space in E Drive (Log) : [45.0 GB](#)

Free Space in F Drive (Protocol) : [7.25 TB](#)

Screen Resolution 1 : [1920x1080](#)

Screen Resolution 2 : [1920x1080](#)

Camera Type : [allPIXA-Pro – Qty : 4](#)

Computer Model / Image : [beg-BKA-BSTE04](#)

Date : [2022](#)

Boot = [F12](#)

Global Version : Current : [2.17.9](#)

New :

TCU.x : Current : [1.12](#)

New :

WSX_3xx/WSC_4xx : Current : [1.9.6](#)

New :

PPS.3 : Current : [2.2](#)

New :

ILI-CTRL : Current : [1.4.3](#)

New :

Remote Maintenance

IP address : [192.168.1.21](#) (Via Citrix)

Subnet mask : [255.255.255.0](#)

Default gateway :

Preferred DNS server :

Alternate DNS server :

On Customer Site

Remote Access (Snapshot gallery, pdf upload, WF applications)

IP address : [192.168.1.21](#)

Subnet mask : [255.255.255.0](#)

Default gateway :

Preferred DNS server :

Alternate DNS server :

Teamviewer : [1 285 328 030 / v15](#)

	OK/NOK/NA
- Windows Credentials	☐ ☒ ☐
- iPQ-xxxxxx_bak_date_time.zip file generated from sysconfig.py	☒ ☐ ☐
- MmxlpmMap file in mmx folder for Check systems (Overlapping)	☐ ☒ ☐
- Screenshot from Application settings	☒ ☐ ☐
- Screenshot from visconfig.py (Mmx + Srb + Image)	☒ ☐ ☐

Parts replaced during Preventive Maintenance :

1 – [Cameras Filters](#)

2 -

Parts suggested to replace during the next Maintenance :

1 – [8 Flash Bulbs](#)

2 -

Part need to be replaced as soon as possible :

1 -

2 -

On Customer Site

Notes

White & Shading

