

On Customer Site

A.Darcel

Visit Report

Reference :

Commande BSTe France : CM1912025		Call / PM number : PM287	
Customer :	CPC Cotentin	System :	iPQ Center
Customer Contact :	M. Emmanuel Cornu	SN / WA :	ASO045079 / WA20214
Customer Order number :		Machine Nickname :	Bobst/ RS6003

Visit Purpose :

Mechanical Preparation	☐	Installation	☐	Start-up	☐
Maintenance	☒	Under Contract	☒	Out of Contract	☐
Troubleshoot	☐	Under Warranty	☐	Out of Warranty	☐
Instruction	☐ Yes				
	☒ No				

	06 / 01 / 2022	/ /	/ /	/ /	/ /	/ /
Travel To	6h30					
Start Time	10h30					
Lunch Time	0					
End Time	13h30					
Travel From	0					

Details	Maintenance préventive du système iPQ Center sur presse Bobst suivant check list.
---------	---

Purpose of the visit completed : Yes ☒ No ☐

Need a new visit : Yes ☐ No ☒

Maintenance Checklist for iPQ systems

Available supporting documents :

- iPQ-Center Setup Instruction
- iPQ-Center Maintenance routines
- WSC-Camera Maintenance routine
- LED illumination maintenance routine

Customer name and place : [CPC Cotentin / Chemin de la Canurie, 50250 La Haye-du-Puits](#)

Contact person at customer / Title : [M. Emmanuel Cornu \(Responsable Maintenance & Travaux neufs\)](#)

Customer Mail & Mobile/Landline : e.cornu-cotentin@cpcpackaging.com / +33 2 33 07 33 11

System Type : [iPQ Center](#)

WA/ASO : [WA20214 / ASO045079](#)

Machine Manufacturer/Model/Nickname : [Bobst / RS 6003 CHS / Bobst](#)

Date : [06/01/2022](#)


Name : [Richard Relin](#)

Comments :

Signatures :



Richard Relin 2022-01-07T11:11:19+01:00

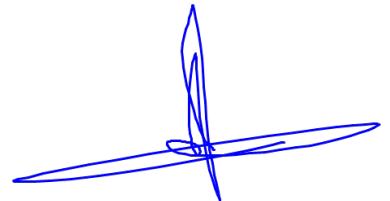

Emmanuel Cornu 2022-01-07T11:10:16+01:00

BST eltromat FSE

Customer

Prior to a Preventive Maintenance :

Check for system affecting modification reports and software releases.

Check for iPQ-Spectral sensor replace date.

Check with customer about problems and demands.

OK/NOK/NA

1. Replace filters of cabinets, check fan function.

☒ ☐ ☐

2. Visual check of system basic hardware condition :

OK/NOK/NA

- Check if all screws are in position and tightened.
- Check cables for damages and correct fit in cable trunks.
- Check if all connectors are tightened.

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

3. Check image quality of screens with test pattern :

OK/NOK/NA

- Load test pattern from screen supplier on computer and display on all screens.
- Check for color quality, pixel defects, contrast, brightness.
- Recalibrate touch screen if necessary.

☐ ☒ ☐

☐ ☒ ☐

☐ ☒ ☐

4. Traverse and WSC-Camera according to separate instruction :

OK/NOK/NA

- Replace flash bulbs for main flash.
- Clean glasses in front of main flash.
- Change filters, check fan function.
- Clean lens from dust.
- Clean shadow reducing backplate.
- Check flash bulb in lacquer (Cold Seal) flash.
- Clean half mirrored glass in lacquer flash.
- Check ZIF function with buttons on WSC Control Board.
- Visual check and cleaning of traverse bars.

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

☐ ☐ ☒

☐ ☐ ☒

☒ ☐ ☐

☒ ☐ ☐

5. Check power flash or homogeneous BackPlate :

OK/NOK/NA

- Check function of flash bulbs according to instruction.
- Clean surface of white plate.
- Visual check and cleaning of traverse bars.

☒ ☐ ☐
☒ ☐ ☐
☒ ☐ ☐

6. Alarm status indicator :

OK/NOK/NA

- Check function of light bulbs in green, yellow and red.
- Check function of acoustic alarm.

☒ ☐ ☐
☒ ☐ ☐

7. Verify the web way in front of line cameras and under measurement wheel :

OK/NOK/NA

- There must be no waves on the web.
- The rollers must be smooth, not (max. slightly) spiraled. (iPQ-Check, sis, icm, bc).
- The guide rollers must rotate with the web speed.
- The measuring wheel must be mounted on a roller wrapped $\geq 90^\circ$ material.
- The line camera must be mounted according to project drawing.
- Web guiding unit in machine must be in operation.

☐ ☒ ☐
☐ ☒ ☐
☐ ☒ ☐
☒ ☐ ☐
☒ ☐ ☐
☒ ☐ ☐

8. Line ship cameras and illumination LED function and image quality :

OK/NOK/NA

- Clean internal mirrors and camera lenses with mirror cleaner.
- Clean LED front illumination and possible LED backlight with window cleaner.
- Verify mechanical mounting of components, special the position of LED backlight to front illumination unit.
- Check LEDs function by sunglasses or welding glasses.
- Change filters and check fans on function.
- Check / proceed the mechanical alignment.
- Check / proceed a white alignment.
- Check / proceed a shading.

☒ ☐ ☐
☒ ☐ ☐
☒ ☐ ☐
☒ ☐ ☐
☒ ☐ ☐
☒ ☐ ☐
☒ ☐ ☐
☐ ☒ ☐

9. Check measurement wheel :

OK/NOK/NA

- Mounted according to latest mechanical drawing. ☒ ☐ ☐
- Pressure according to iPQ-Check maintenance manual. (10-15N) ☒ ☐ ☐
- No dirt or damages on rubber surface. ☒ ☐ ☐
- Smooth running. ☒ ☐ ☐
- Running on the web. ☒ ☐ ☐
- Not too far from line camera unit (≤ 1 meter). ☒ ☐ ☐
- Rollers not or only slightly spiraled. ☒ ☐ ☐

OK/NOK/NA

10. Exchange the UPS battery according to iPQ-Check maintenance.

☐ ☒ ☐

- Model : **ELIPSE ECO 1200** Date : **2018**

11. Check for useful software update with release letter : (*)

OK/NOK/NA

- Update to latest released software version IF system is affected from bug fixes and/or new functions and features. ☒ ☐ ☐
- Check if an update of communication Workflow components is also necessary. ☐ ☒ ☐

12. Check Spectral color measurement :

OK/NOK/NA

- Check sensor front, sensor flashes and reference tiles for dust and contamination. ☐ ☒ ☐
- Proceed an alignment of sensor to backing by SUAT-tool. ☐ ☒ ☐
- Proceed an alignment of a possible backing wheel by SUAT-tool. ☐ ☒ ☐
- Check and clean backing from contamination. ☐ ☒ ☐
- Check if sensor can reach its manual calibration and parking position. ☐ ☒ ☐
- Check backing wheel functions : spin, air pressure, (parallel) position to web. ☐ ☒ ☐

13. Check function and performance of the system :

OK/NOK/NA

- Performance of 100% print defect detection. ☒ ☐ ☐
- System performance at splice situations. ☒ ☐ ☐

On Customer Site

A.Darcel

- | | |
|---|---|
| - System performance after "out of print" situations. | ☒ ☐ ☐ |
| - System performance close to max. iPQ check system speed. | ☒ ☐ ☐ |
| - Check function/performance of additional software options like barcode, color Monitoring, Smartregister, etc. | ☒ ☐ ☐ |
| - Check remote service function with BST eltromat RS. (**) | ☒ ☐ ☐ |
| - Teamviewer Version check and upgrade (v12) : | ☒ ☐ ☐ |
| - Check availability of system in customer network for snapshot gallery, pdf-upload And WorkFlow applications. | ☐ ☒ ☐ |

14. Backup for customer :

OK/NOK/NA

- | | |
|--|---|
| - <i>Preconditions : above points are checked and okay</i> | ☒ ☐ ☐ |
| - Backup HardDisk or Image-PC exist from current Base Image -PC. | ☒ ☐ ☐ |
| - If NOK on previous point, make a new Image-PC or Backup HDD. | ☒ ☐ ☐ |
| - Write date and WA/ASO number on Backup HardDisk or Image-PC file name and give a copy to the customer. | ☒ ☐ ☐ |

OK/NOK/NA

Make a backup for our own service purpose and put this on our server. (*)**

☒☐☐

Technical datas

Main Power 230V Input : [229V](#)

Computer name : [20214iPQ-Center1-1](#)

Computer description : [iPQ Center, WA20214](#)

Total Physical Memory : [48 GB](#)

Free Space in C Drive (System) : [48.5 GB](#)

Free Space in D Drive (Data) : [95.5 GB](#)

Free Space in E Drive (Log) : [48.6 GB](#)

Free Space in F Drive (Protocol) : [1.63 TB](#)

Screen Resolution 1 : [1920x1080](#)

Screen Resolution 2 : [1920x1080](#)

Screen Resolution 3 : [1920x1080](#)

Screen Resolution 4 :

Camera Type : [2 X DALSA-P4-70KHz](#)

Computer Model / Image : [IPC-BKA-BSTE02](#)

Date : [2018W10](#)

UPS Catalog Nb : [EL1200USBIEC](#)

(*)	Global Version :	Current : 2.16.1	New : 2.17.2
	TCU.x :	Current : 1.12	New : 1.12
	WSX_3xx/WSC_4xx :	Current : 1.9.3	New : 1.9.4
	PPS.3 :	Current : 2.2	New : 2.2
	ILI-CTRL :	Current : 1.4.3	New : 1.4.3

(**) **Remote Maintenance (Teamviewer)**

IP address : [10.50.21.14](#)

Subnet mask : [255.255.255.0](#)

Default gateway : [10.50.21.1](#)

Preferred DNS server : [10.50.21.1](#)

Alternate DNS server :

Remote Access (Snapshot gallery, pdf upload, WF applications)

IP address :

Subnet mask :

Default gateway :

Preferred DNS server :

Alternate DNS server :

Teamviewer ID : [1 035 997 951 / v12](#)

	OK/NOK/NA
(***) - Dcf and pdfx folder	☐ ☒ ☐
- Windows Credentials	☐ ☒ ☐
- iPQ-xxxxxx_bak_date_time.zip file generated from sysconfig.py	☒ ☐ ☐
- MmxlpmMap file in mmx folder for Check systems (Overlapping)	☒ ☐ ☐
- Screenshot from Application settings	☐ ☒ ☐
- Screenshot from visconfig.py (Mmx + Srb + Image)	☐ ☒ ☐

Parts replaced during Preventive Maintenance :

1 - [8 Bulbs](#)

2 -

Parts suggested to replace during the next Maintenance :

1 - [Plaque backlight](#)

2 -

Part need to be replaced as soon as possible :

1 -

2 -

Notes

