


Shark4k Network connection diagram

The following diagram shows the network connection set up for the Shark4k system.

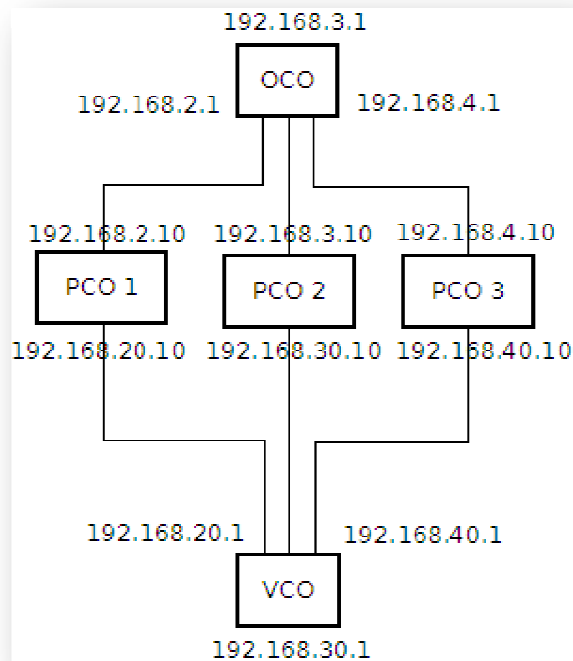

The leading configuration is the configuration between OCO and PCO done by the BST Setup tool. When a PCO is configured on the interface to the OCO with a certain IP address, it assumes that the IP address on the interface to the VCO is the same but the value of the third address byte is multiplied by ten. I.e. if the IP address on the interface to the OCO is 192.168.2.10 then the software assumes that the IP address on the interface to the VCO is 192.168.20.10.