



Connection of the ProView to the existing GV210 in the regi_star 20 (WA18081)

Output 2, GV210, use of the existing cable:

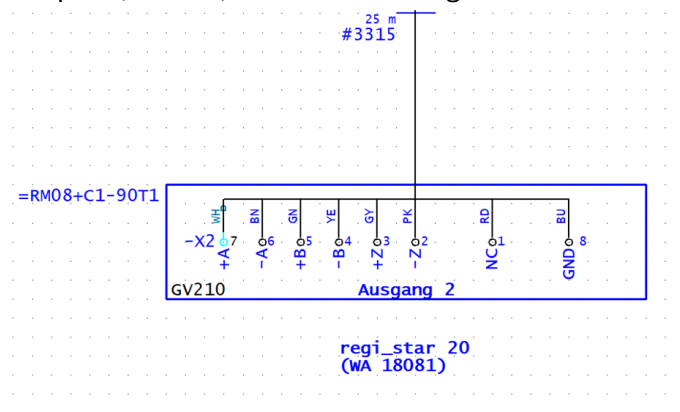

Remove the existing connector on the side of the video system and connect the cable to the ProView 90x1 transfer module as follows:

GV210	Wire colour	90x1 (ProView)
A+	White	-90X1:3
A-	Brown	-90X1:4
B+	Green	-90X1:5
B-	Yellow	-90X1:6
Z+	Grey	-90X1:7
Z-	Pink	-90X1:8
GND	Blue	-90X1:1

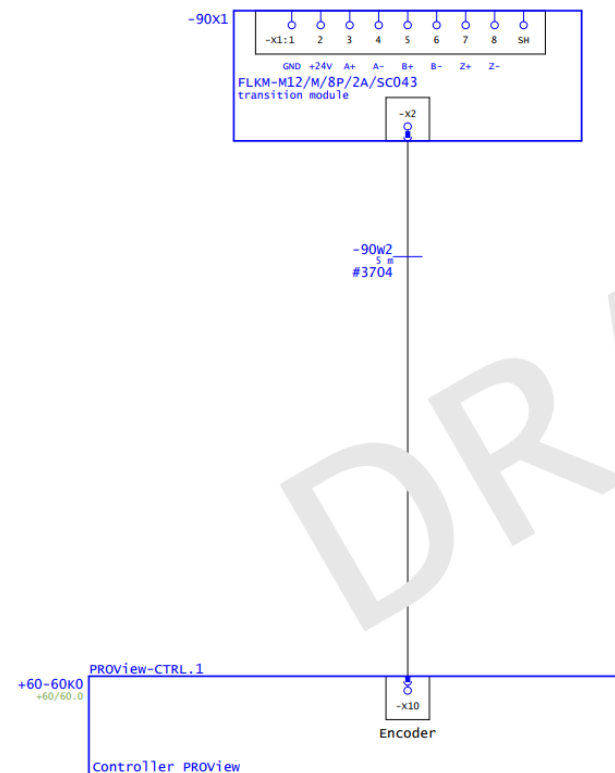

Sync – Setting:

Pulstream RS422, A+/A- and B+/B-; Repeatpulse RS422, Z+/Z-