

Technical Note

Product iPQ

Subject *EIZO Monitor T2381 at the beg-BKA-BSTE03*

Contents:

1	REVISION OVERVIEW	2
2	OPERATION EIZO MONITOR T2381W (1ELDI320670) AT THE BEG-BKA-BSTE03..	2
2.1	CONFIGURATION OF DMT-DD.....	2

Technical Note

Product iPQ

Subject *EIZO Monitor T2381 at the beg-BKA-BSTE03*

1 REVISION OVERVIEW


Revision:	Date:	Editor	Changes:
1.0	29.01.2021	U.Brune	First release
1.1	01.02.2021	U. Brune	Improvements

2 OPERATION EIZO MONITOR T2381W (1ELDI320670) AT THE BEG-BKA-BSTE03

If an old Eizo monitor T2381W (1ELDI320670) is operated on the beg-BKA-BSTE03, a configuration of the touch driver DMT-DD is necessary so that the zoom function can be carried out correctly. The DMT-DD application is a product of DMC Co. Ltd. for configuring the EIZO touch monitor.

2.1 CONFIGURATION OF DMT-DD.

Start the DMT-DD application for configuration in the service mode of the computer (Desktop-Link).

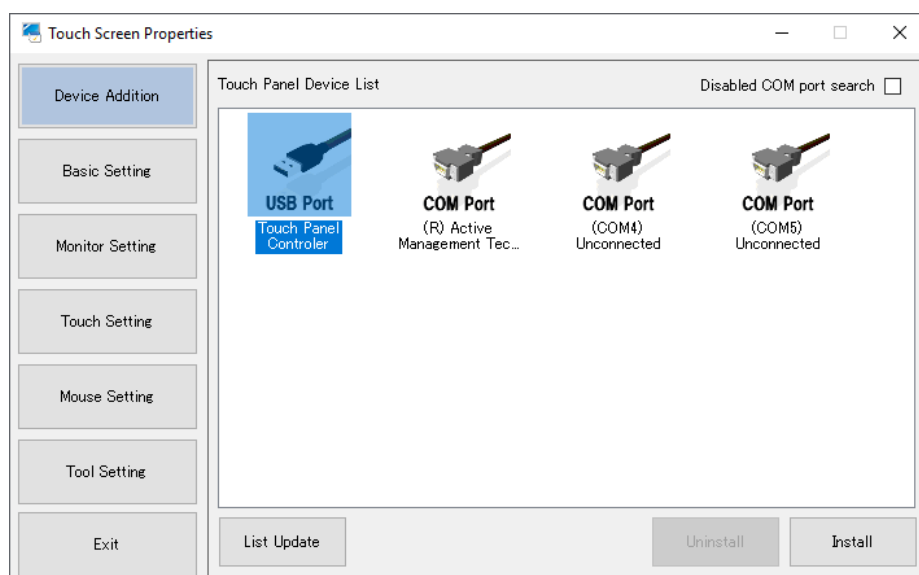


After starting the application, check under *Device Addition* whether the touch monitor was recognized at the USB port.


Technical Note

Product iPQ

Subject *EIZO Monitor T2381 at the beg-BKA-BSTE03*

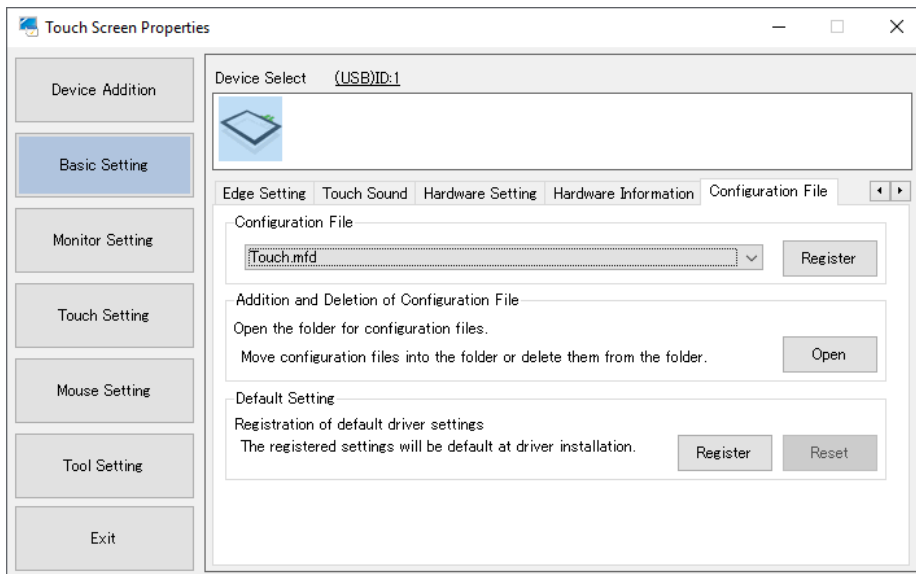

Under *Basic Setting* select the “*Configuration File*” tab.
Select ‘*Touch.mfd*’ as the configuration file and confirm the selection with ‘*Register*’.

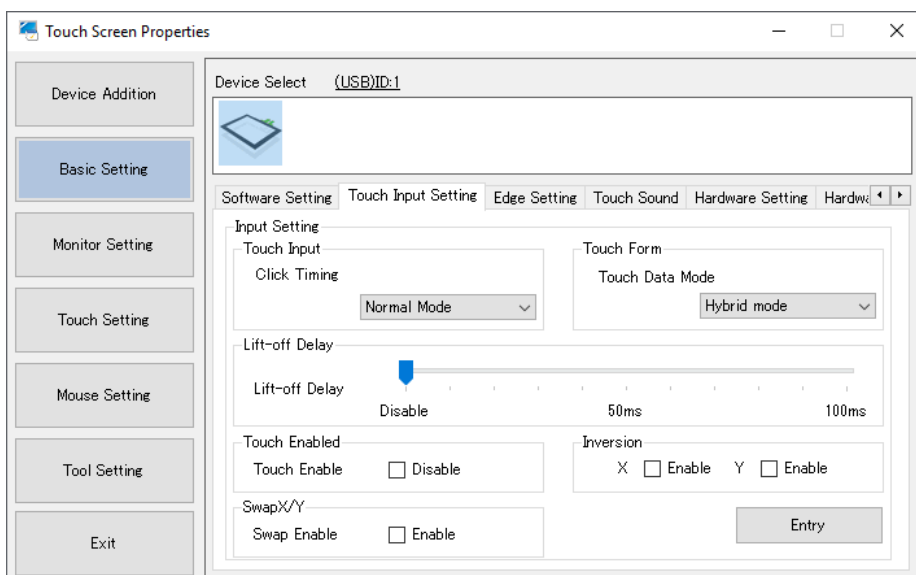

Then select the “*Touch Input Setting*” tab and activate the under “*Touch Data Mode*” the ‘*Hybrid mode*’. Save this setting with ‘*Entry*’.

This completes the configuration and the computer **must** be restarted.
After restarting, check the zoom function in the live image display of the iPQ system.