

On Customer Site

Visit Report

Reference :

Contract N°	PM469-470-471		
BST Parts	Cliquez ou appuyez ici pour entrer du texte.	Customer Parts	Cliquez ou appuyez ici pour entrer du texte.
Contact	Nina Bühlmann	Mail	nbuhlmann@cclind.com

Visit Purpose :

Maintenance	Out of Contract
Instruction	No

	03/04/2023	04/04/2023	-	-	-	-
Travel To	0.5	0.5	-	-	-	-
Start Time	9h00	9h00	-	-	-	-
Lunch Time	1	-	-	-	-	-
End Time	16h00	11h30	-	-	-	-
Travel From	0.5	0.5	-	-	-	-

Details	Maintenance préventive sur les caméra des machines S27 – S21 - 511 Cliquez ou appuyez ici pour entrer du texte.
---------	---

Purpose of the visit completed : Yes

Need a new visit : No


On Customer Site

Systems Checklist for NYQUIST Systems


SN	System	Nickname	PM	Part	Version / UG	Note
-42.1534	DS 550 4000 / 2032aC - 0.1388	-511 back	YES	NO	-7.4.29.78	-
-42.1631	DS 550 HR1 / 2051dc - 0.25	-511 front	YES	NO	-7.4.29.78	-
-42.1896	DS 430 4000 / 2032aC - 0.1111	-s21	YES	NO	-7.4.25.71	-
-42.2359	DS 550 4000 / 2032aC - 0.1388	-S27	NO	NO	-7.4.25.71	-
-	Choisissez un élément.	-	-	-	-	-
-	Choisissez un élément.	-	-	-	-	-
-	Choisissez un élément.	-	-	-	-	-
-	Choisissez un élément.	-	-	-	-	-
-	Choisissez un élément.	-	-	-	-	-
-	Choisissez un élément.	-	-	-	-	-
-	Choisissez un élément.	-	-	-	-	-
-	Choisissez un élément.	-	-	-	-	-
-	Choisissez un élément.	-	-	-	-	-
-	Choisissez un élément.	-	-	-	-	-

Date : 04/04/2023

BST : Vivien Coutellier

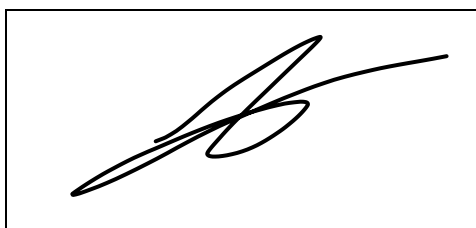

BST France

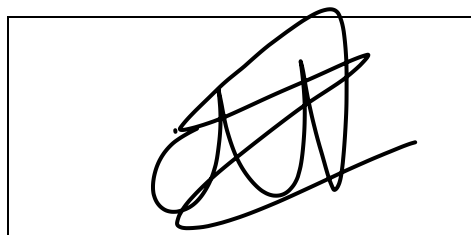

Customer

[illegible]

On Customer Site

Maintenance routine for NYQUIST Systems

1. Cleaning the optical parts :

- Mirror cleaned with ZEISS lens wipes. ☐
- Camera lens cleaned with ZEISS lens wipes. ☐
- Reflectors cleaned with soft cloth using iso propanol or alcohol. ☐
- Backing Bar cleaned with soft using iso propanol or alcohol. ☐
- Optionally acrylic insert of backing bar replaced. ☐

2. Check functioning of the LEDs :

- LEDs checked. ☐
- Brightness and uniformity of the image checked. ☐

3. Replacement of the encoder wheel :

- Encoder wheel replaced and tightened or checked ☐
- Spring replaced (if necessary) and spring force checked (ca. 1kg/10N) ☐

4. Software update :

- Software Update (if necessary). ☐

5. Final check of the running system :

- Stability of live image checked (without reference image). ☐
- Stripe alignment checked (Normal and reflective mode). ☐
- Registration checked. ☐
- Maximum speed checked. ☐
- Stable location of the EagleView camera checked. ☐
- Hard drive capacity checked. ☐
- Backup created and saved locally and/or on USB stick. ☐

NYQUIST systems Preventive Maintenance

On Customer Site

6. Backup :

- | | |
|--------------------------------------|-------------------------------------|
| - NYCAMConfig folder | ☒ |
| - NYCAMPprog folder | ☒ |
| - Windows credentials (if exist) | ☒ |
| - Application / Computer Screenshots | ☒ |