

On Customer Site

Visit Report

Reference :

Commande BSTe France : CM2103037		Call / PM number : PM 245	
Customer :	Schur Flexibles Uni Roto	System :	SHS 4100
Customer Contact :	M. Thomas Tronchet	ASO / WA :	ASO050086
Customer Order number :		Machine Nickname :	Roto 8 /ROTOPAK 3000-3R

Visit Purpose :

Mechanical Preparation	☐	Installation	☐	Start-up	☐
Maintenance	☒	Under Contract	☒	Out of Contract	☐
Troubleshoot	☐	Under Warranty	☐	Out of Warranty	☐
Instruction	☐ Yes				
	☒ No				

	18 / 10 / 2021	/ /	/ /	/ /	/ /	/ /
Travel To	0					
Start Time	14h30					
Lunch Time	0					
End Time	15h30					
Travel From	4h00					

Details	Vérification de fonction nettoyage de camera, avec relever de data.
---------	---

Purpose of the visit completed : Yes ☒ No ☐
Need a new visit : Yes ☐ No ☒

On Customer Site

Maintenance Checklist for SHS Systems

Available supporting documents :

- iPQ-Center Setup Instruction
- iPQ-Center Maintenance routines
- WSC-Camera Maintenance routine
- LED illumination maintenance routine

Customer name and place : [Schur Flexibles Uni Roto – 24 Hameau de la Neuville – 62127 Averdoingt - France](#)

Contact person at customer / Title : [M. Thomas Tronchet \(Maintenance Manager\)](#)

Customer Mail & Mobile/Landline : thomas.tronchet@schurflexibles.com / +33 7 64 41 95 75

System Type : [SHS 4100](#)

WA/ASO : [ASO050086](#)

Machine Manufacturer/Model/Nickname : [Roto 8/ROTOPAK 3000-3R](#)

Date : [18/10/2021](#)

Name : [Richard Relin](#)


Comments :

Signatures :



Richard Relin 2021-10-22T09:53:51+02:00

BST eltromat FSE

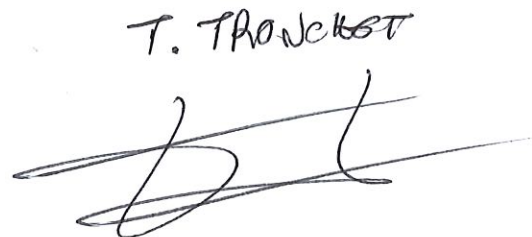

Customer

On Customer Site

Prior to a Preventive Maintenance :

Check for system affecting modification reports and software releases.

Check for iPQ-Spectral sensor replace date.

Check with customer about problems and demands.

1. Premius digital Controller :

OK/NOK/NA

- Check fan function.
- Replace or clean fan filter.

☒ ☐ ☐

☒ ☐ ☐

2. Visual check of system basic hardware condition :

OK/NOK/NA

- Check if all screws are in position and tightened.
- Check cables for damages and correct fit in cable trunks.
- Check if all connectors are tightened.

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

3. Check image quality of screens with test pattern :

OK/NOK/NA

- Load test pattern from screen supplier on computer and display on all screens.
- Check for color quality, pixel defects, contrast, brightness.
- White calibration (if the colors are not uniform)
- Gray calibration (color control option)
- Lens calibration (Register option)
- Recalibrate touch screen if necessary.

☐ ☐ ☒

☒ ☐ ☐

☐ ☐ ☒

☐ ☐ ☒

☐ ☐ ☒

☐ ☒ ☐

4. Traverse and Optic Head according to separate instruction :

OK/NOK/NA

- Replace flash bulbs / flash blocks.

☐ ☒ ☐

Last replacement date :

Screwed ☐ Welded ☒

- Clean glasses on flash units (Top/Bottom).
- Lens glass cleaning.
- Visual check and of traverse bars.

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

On Customer Site

5. Check power flash or homogeneous BackPlate :

OK/NOK/NA

- Check function of flash bulbs.

☒ ☐ ☐

Result :

- ~~Clean~~/Check surface of BackPlate.

☒ ☐ ☐

Dimension :

-

6. Check for useful software update with release letter : (*)

OK/NOK/NA

- Update to latest released software version IF system is affected from bug fixes and/or new functions, features and developments.

☐ ☒ ☐

7. Give an instruction and production guiding for system operators.

OK/NOK/NA

- Explain special functions more detailed on operators (On request).
- Guide the production and watch how operators work with the system to give hints for a better operation if necessary.

☐ ☒ ☐

☐ ☒ ☐

8. Backup / Fine tuning : (***)

OK/NOK/NA

- *Preconditions : above points are checked and okay*
- Backup HardDisk or Image-PC exist from current Base Image -PC.
- Save trace on USB stick and explain the procedure to the customer.
- Save database (Genius.mdb)
- FireViewer icon placed on desktop

☒ ☐ ☐

☐ ☒ ☐

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

9. Make a backup for our own service purpose and put this on our server.

OK/NOK/NA

☒ ☐ ☐

On Customer Site

On Customer Site

Technical datas

Computer name : SHS4100

Computer description : SHS4100

Total Physical Memory : 4 GB

Free Space in C Drive (System) : 11 GB

Free Space in D Drive : 1,93 GB

Screen Resolution 1 : 1280x1024

Screen Resolution 2 : 1280x1024

Computer Type : PD Controller SHS4100

(*) Global Version : Current : 7.1.2

New :

(**) Remote Maintenance (Teamviewer)

IP address :

Subnet mask :

Default gateway :

Preferred DNS server :

Alternate DNS server :

Teamviewer ID : 106 110 1996 /v12

- (***)
- Trace on USB Stick
 - Database (Genius.mdb)
 - Screenshot from Application settings
 - System picture

OK/NOK/NA

☒ ☐ ☐

☒ ☐ ☐

☒ ☐ ☐

☐ ☒ ☐

On Customer Site

Parts replaced during Preventive Maintenance :

1 -
2 -

Parts suggested to replace during the next Maintenance :

1 -	3 -
2 -	4 -

Part need to be replaced as soon as possible :

1 -	4 -
2 -	5 -



SHS Systems Preventive Maintenance

On Customer Site

Notes
