

On Customer Site

Visit Report

Reference :

Commande BSTe France : CM1912025 / 2		Call / PM number : PM617	
Customer :	CPC Cotentin	System :	Jupiter F&B
Customer Contact :	M. Cédric Fautrat	SN :	806643
Customer Order number :	CM1912025 / 2 signed	Machine Nickname :	DCM 9

Visit Purpose :

Mechanical Preparation	☐	Installation	☐	Start-up	☐
Maintenance	☒	Under Contract	☒	Out of Contract	☐
Troubleshoot	☐	Under Warranty	☐	Out of Warranty	☐
Instruction	☐ Yes				
	☒ No				

	26 / 03 /2024					
Travel To	0.5					
Start Time	8h30					
Lunch Time	1					
End Time	12h00					
Travel From	0					

Details	Maintenance Préventive du système d'inspection sur presse DCM9. Archivage. Nettoyage des optiques et calibration.
---------	---

Purpose of the visit completed : Yes ☒ No ☐

Need a new visit : Yes ☐ No ☒

On Customer Site

Maintenance Checklist for AVT Systems

Customer name and place : [CPC Cotentin / Chemin de la Canurie, 50250 La Haye-du-Puits](#)

Contact person at customer / Title : [M. Cédric Fautrat \(Technicien de Maintenance\)](#)

Customer Mail & Mobile/Landline : maintenance-cotentin@cpcpackaging.com / +33 2 33 07 33 11 / +33 7 80 61 36 91

System SN : [806643](#)

SOB SN : [95203488 – SOB3 JUPITER XP \(IBASE\) ACB ANALOG.CAM 4G V2.9](#)

Machine Manufacturer/Model/Nickname : [DCM / BIVA 10923 / DCM 9](#)

Date : [27/03/2024](#)

Name : [Arnaud Darcel](#)


Comments :

Signatures :



Arnaud Darcel 2024-04-05T09:30:15+02:00

BST eltromat FSE

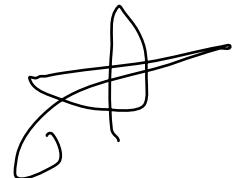

Customer

On Customer Site

Prior to a Preventive Maintenance :

Check for system affecting modification reports and software releases.

Check for optional light source.

Check with customer about problems, or failure with the system.

1. Cleaning the optical parts :

OK/NOK/NA

- Mirror cleaned with ZEISS lens wipes. ☒ ☐ ☐
- Camera lens cleaned with ZEISS lens wipes. ☒ ☐ ☐
- Reflectors cleaned with soft cloth using iso propanol or alcohol. ☐ ☐ ☒
- Back plate cleaned. ☒ ☐ ☐
- Computer filter cleaned/replaced ☒ ☐ ☐

2. Camera calibration 100% :

OK/NOK/NA

- Field of View / Period ☐ ☐ ☒
- Offset/Gain Calibration. ☐ ☐ ☒
- Zero LED calibration : Anyspeed & Position ☐ ☐ ☒

3. Check functioning of the Lamps :

OK/NOK/NA

- Lamps replacement. : ☐ ☐ ☒
- Brightness and uniformity of the image checked. ☒ ☐ ☐

4. Replacement of the encoder wheel :

OK/NOK/NA

- Encoder wheel replaced and tightened ☐ ☐ ☒
- Spring replaced (if necessary) and spring force checked (ca. 1kg/10N) ☐ ☐ ☒

5. Software update :

OK/NOK/NA

- Software Update (if necessary). ☐ ☒ ☐

Old SW version : [2.9.2.2](#)

New SW version :

On Customer Site

6. Final check of the running system :

OK/NOK/NA

- Stability of live image checked (without reference image).
- Stripe alignment checked (Normal and reflective mode).
- Registration checked.
- Maximum speed checked.
- Hard drive capacity checked.
- Backup created and saved locally and/or on USB stick.

☒	☐	☐
☐	☐	☒
☒	☐	☐
☒	☐	☐
☒	☐	☐
☒	☐	☐

7. Backup :

OK/NOK/NA

- BackupRestore
- Archive Printflow

☒	☐	☐
☒	☐	☐

Parts replaced during Preventive Maintenance :

- | | |
|---------------------|-----|
| 1 – Computer Filter | 3 - |
| 2 - | 4 - |

Parts suggested to replace during the next Maintenance :

- | | |
|-----|-----|
| 1 - | 3 - |
| 2 - | 4 - |

Part need to be replaced as soon as possible :

- | | |
|-----|-----|
| 1 - | 3 - |
| 2 - | 4 - |

On Customer Site

Technical datas

Computer name : [AVT-PV-DCM9](#)

Total Physical Memory : [1.92 GB](#)

Free Space in C Drive (System) : [31.7 GB](#)

Free Space in D Drive : [398 GB](#)

OS : [Microsoft Windows XP Professional 2002 – SP2](#)

Screen Resolution 1 : [1600x600](#)

Screen Resolution 1 : [1600x600](#)

Computer : [95203488 – SOB3 JUPITER XP \(IBASE\) ACB ANALOG.CAM 4G V2.9](#)

Date : [Jun, 2013](#)

SN : [302599](#)

ACB Firmware : [8/7](#)

Remote Maintenance (Teamviewer)

IP address : [10.50.21.26](#)

Subnet mask : [255.255.255.0](#)

Default gateway : [10.50.21.1](#)

Preferred DNS server : [8.8.8.8](#)

Alternate DNS server :

Teamviewer ID / Version : [998 832 994 / v10](#)

On Customer Site

Notes
